


We UVCare...



# Application Optimised UV for Food & Beverage

PURELINE PQ EO H+

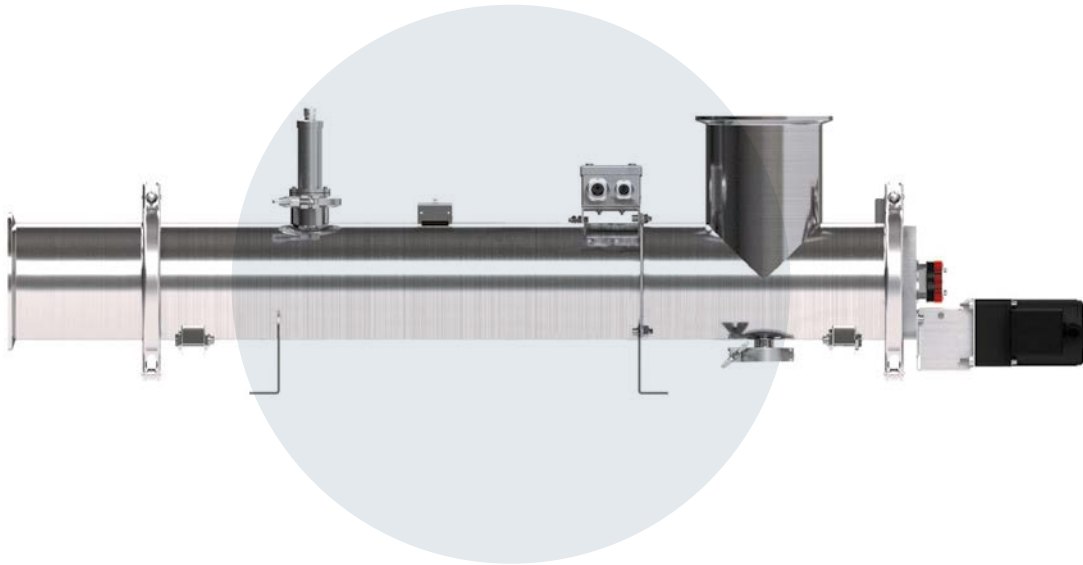

## Bioassayed UV Treatment for Food & Beverage


Our PureLine PQ EO H+ UV systems are aimed specifically at providing third party bioassayed UV disinfection for product and process waters used in the food and beverage industry. The PQ EO H+ integrates an innovative single medium pressure lamp chamber design with sensors and intelligent control technology to automatically deliver optimum disinfection performance with high operational efficiency. The PQ EO H+ will eliminate harmful microorganisms, reduce the bioburden, protect against bio-fouling, lead to fewer CIP / SIP cycles and lower operating costs. Each system comes with a certified dry UV sensor that measures the germicidal output of the UV system and a UV dose read out makes it easy to monitor and log performance. The control system also has the ability to take flow and transmittance meter inputs and calculate the UV dose based on real time operating conditions. In addition to all the PQ features our PureLine PQ EO H+ models are Hygienic units designed with Triclamp fittings and have a 0.8 micron electro polished internal finish.

berson

hanovia


aquionics

# Potential locations of the PureLine PQ EO H+™

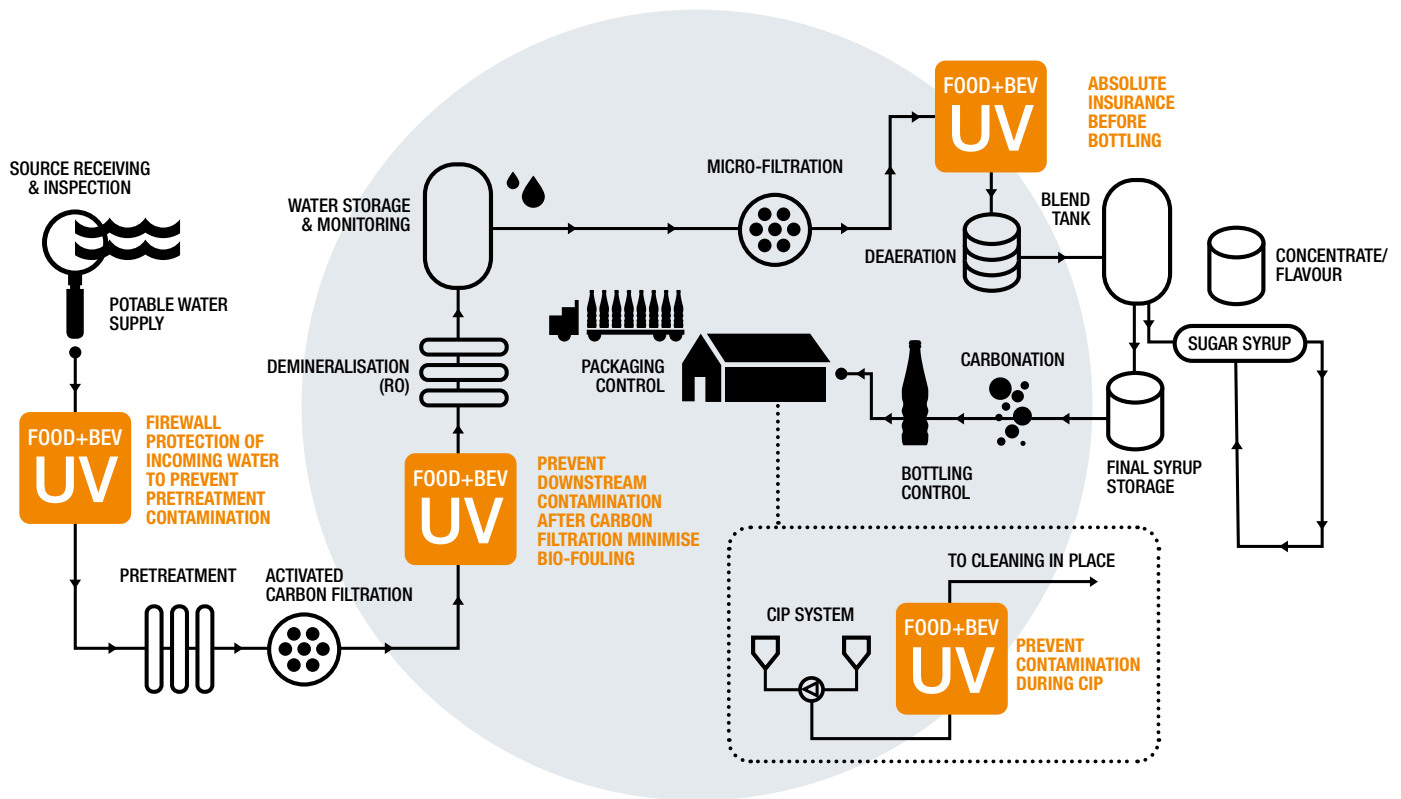

KEY FEATURES	WHAT IT GIVES YOU	BENEFITS FOR YOU
<b>INTELLIGENCE</b>		
UV sensor	Continuous verification of performance with in-built low UV dose alarm	Easy to monitor and log system performance
UVGuard™ on UV sensor window	Protects against UV exposure when checking a UV duty sensor with a reference sensor while the system is operating	Ability to safely audit the UV performance without interrupting production
Flow and UV transmittance (UVT) meter inputs	Stepless adjustment of lamp power based on real time operating conditions	Optimised use of energy, saving operating costs
<b>OPTIMISATION</b>		
Single medium pressure lamp	Provides germicidal wavelengths to disinfect your product or process water	Does not affect taste and colour of final product
		No chemicals
		Protects pre-treatment equipment and RO filters from bio-fouling reducing CIP frequency and downtime
	High treatment capacity with a single lamp	Compact footprint and reduced operating cost
Innovative chamber design	Maximises the water's exposure to UV light	Reduces energy costs
Designed specifically for the food and beverage industry where hygienic design is required	Chamber has Tri-clamp connections <0.8 µm internal finish electropolished and passivated	Industry compliance, reduced risk of microbiological contamination
	FDA and EC approved seals	Industry compliant materials
	*Automatic wiper	Self cleaning to maintain performance
<b>INTEGRATION</b>		
Designed for your process	*Skid mountable	Easy to install
	*UVShield™ power cut-out for lamp access	Enhanced operator safety when changing a lamp
	*Water leak detection	Increased product safety
	RS 485 Industrial Ethernet	Easy integration to SCADA or plant control systems

\* Option

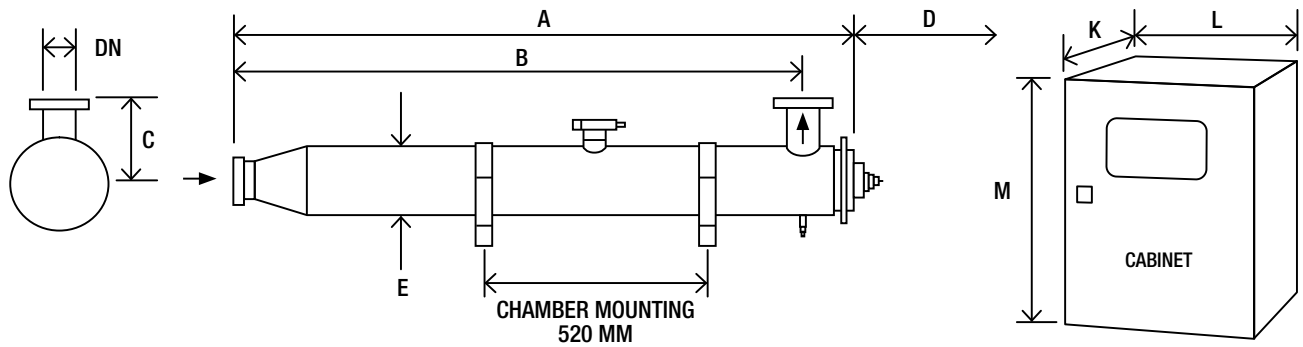

Model	Max Power (kW)	Min T <sub>1,0</sub> (%)	Dimensions (mm)										Approx weight (Kg)					
			Chamber		Control Cabinet (fan cooled)		Control Cabinet (with A/C)		Chamber	Control Cabinet								
			A	B	C	D	E	DN	K*	L	M**	K*	L	M**	Empty	Fan cooled	with A/C	
PureLine PQ EO H+ 6	9	80	1377	1601	1174	220	1230	150	150	400	800	1200	400	1250	1200	44	96	120

\* Allow dimension L in front of cabinet for door opening and panel access.

\*\* M dimension includes the space for the cabinet mounting brackets but you need to allow space below the cabinet for cable entry and access (minimum of 250 mm).

All dimensions are approximate for clearance purposes only. We have a policy of continuous product development, exact drawings are available on request. All specifications are subject to change without notification. Your distributor or our account manager can advise on correct sizing and specification requirements.

### UV CHAMBER

Material:	StSt 316L / 1.4404
Internal finish:	Tube, welds as laid, <0.8 µm Ra electropolished and passivated
External finish:	BS EN 10088-2 or 10088-3, 1J or 2J and ASTM No. 4
Process (mating) connections:	Tri-clamp DIN 32676 SER A
Drain connection:	Tri-clamp blanked off
End plate:	Removable end plate
Degree of protection:	IP65 equivalent to NEMA 4 but not for outside use
Arc tube (lamp):	Medium pressure
Arc tube enclosure:	Doped quartz (F240)
Number of arc tubes (lamps):	1
Expected lamp life:	9000 hours
Temperature sensor:	Yes
UV sensor:	Calibrated DVGW compliant dry sensor with UVGuard™ sensor window
Working fluid temperature:	1°C to 60°C (80°C unwiped)
Maximum CIP temperature:	95°C lamp off and CIP request acknowledged
Hydrostatically pressure tested:	Yes to PED requirements EN 13445
Chamber mounting:	Horizontal only
Operating pressure:	10 bar (positive pressure only)
Seals:	EPDM, ADI free, EC 1935/2004, FDA 21 CFR 177.2600 approved

### OPTIONS

Document Support Pack
Cabinet: Stainless steel 304
Cabinet: Stainless steel 304 with air conditioning (5°-50°C), IP66 (NEMA 4X), relative humidity <95% non condensing
Cabinet: Stainless steel 316 with air conditioning with slooping roof (5°-50°C), IP66 (NEMA 4X), relative humidity <95% non condensing
Operation and Maintenance manual and printed Installation and Commissioning manual in Chinese, English, French, German and Spanish
Wiper: Automatic (electrically driven)
Flange options: ANSI 150, JIS, Table 'E' and PN16
Chamber internal finish: <0.6 µm Ra or <0.38 µm Ra, welds polished out, electropolished and passivated
Lead length: 20 and 29 m
Max CIP temp: 130°C lamp turned off and CIP request acknowledged
Welder Document Pack for chamber construction
Bleed valve: Hygienic valve with tri-clamp connection
Skid mounting (not ship board or earthquake zone)
Vent valve: Manual valve hygienic design

### OPTIONS (CONTINUED)

UVShield™: Power cut-out for lamp access
Water leak detection: Detects water leaking from the UV lamp enclosure UL 508A
In field UV reference sensor kit

### CABINET (CONTROLLER UVTOUCH™)

Material:	Polyester coated carbon steel
Degree of protection:	IP55 / NEMA 12
Supply voltages:	380 V to 480 V (-5% to +10%), 50/60 Hz
Operating temp range:	5°C to 40°C
Relative humidity:	<85% non-condensing
Cooling fans:	Yes

### CABINET (GENERAL)

Ballast power adjustment:	Stepless variable power (30 to 100% of maximum ballast rating)
Interconnecting cable:	10 m cabinet to chamber

### CUSTOMER OUTPUTS

4-20 mA passive outputs:	UV RED dose, UV intensity and chamber temperature
VFC outputs:	Lamp ready (enable flow), system running, common warning, common trip, low dose warning, water leak detected, system in remote, OK to CIP

### CUSTOMER INPUTS

4-20 mA active or passive inputs:	Flow meter and transmittance meter
VFC inputs:	Remote stop/start, remote reset, remote CIP request, reduce power
24 V dc pulsed inputs:	Start and stop

### CUSTOMER COMMUNICATIONS PORT

RS 485:	Industrial Ethernet
---------	---------------------

### APPROVALS

CE marked



**PURELINE PQ**

Also available in our Food & Beverage product range...



**PURELINE DC+DCD**

Dechlorination and Chlorine  
Dioxide removal



**PURELINE DO**

Ozone removal and  
disinfection



**PURELINE D**

Disinfection as part of a  
multi barrier approach



**PURELINE S**

Sugar syrup disinfection



**www.weuvcare.com**

BERSON, HANOVIA & AQUIONICS WORKING TOGETHER AS PART OF THE HALMA GROUP.

**Netherlands**

t: +31 40 2907777  
e: sales@bersonuv.com

**China**

t: +86 21 61679599  
e: china@hanovia.com

**USA**

t: +1 980 256 5700  
e: sales@aquionics.com

**Germany**

t: +49 800 5892779  
e: verkauf@hanovia.com

**Malaysia**

t: +60 16 440 8834  
e: asia@hanovia.com

**Canada**

t: +1 980.256.5700  
e: sales@aquionics.com

**United Kingdom**

t: +44 1753 515300  
e: sales@hanovia.com

**Mexico**

t: +1 980.256.5700  
e: sales@aquionics.com



FM 29365

©2019 Berson Hanovia Aquionics - 910433-2430-02-EN